

 







RIDER SCREENS

- 1 Press  to toggle between Rider Screens.
- 2 To customize your rider screens, press  icon on motorcycle display screen and select among available options.
- 3 Press  icon on motorcycle display screen to save and return.

AUDIO

- 1 Press  to access Audio Section.
- 2 To select audio source, press  again, or select the red circle icon in upper left corner. Current source is shown inside of circle .


DISPLAY ON/OFF SCREEN

- 1 Press  once to display INDIAN® logo Screen.
- 2 HOLD  for 3 seconds to turn off display (audio remains on). Press for 5 seconds to turn off display and mute audio.
- 3 Press any button to turn on display.

BLUETOOTH SMARTPHONE PAIRING





- 1 Press  to access Bluetooth Section on the display.

NOTE You must enable Bluetooth on your phone and make it visible to complete this process.

- 2 To pair phone, enable Bluetooth on your phone, make phone visible, and press  icon.
- 3 Press OK, and select your phone on motorcycle display screen.
- 4 Agree to all notifications on your phone.

NOTE While accepting notifications, remember to select the “Do Not Show Again” box (if applicable).

NAVIGATION

- 1 Press  to access Navigation Section.
- 2 Press  on screen to re-center map, or change map view.
- 3 Press  on screen to enter address, search for point of interest, and access favorites.
- 4 While in an active route, press  for navigation volume options.



Indian Motorcycle® Ride Command™

QUICK START GUIDE





HAND CONTROLS

TRIGGER CONTROLS


- 1 Use left hand trigger ① to decline selection, or switch infotainment screens.
- 2 Use right hand trigger, or center push on switch ③, to accept selection.

AUDIO CONTROLS

- 1 Press right/left on the 5 position joystick ② to advance/go back.
- 2 Press up/down on the 5 position joystick to increase/decrease volume.
- 3 Press  on the left hand control to mute, play or pause audio.
- 4 Hold  to activate voice control features for Bluetooth connected smart phone (if supported by phone and headset is connected).

MAP CONTROLS

- 1 Press up/down on the switch ③ to zoom in/out of the map.

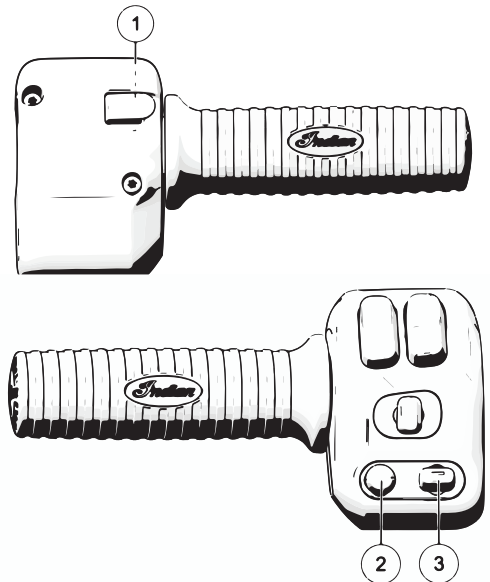

SETTINGS

To access the settings menu on the touchscreen, press  at the top of the motorcycle display, then press .



DOWNLOAD NEW SOFTWARE

ON YOUR PERSONAL COMPUTER

- 1 Go to www.my.indianmotorcycle.com.
- 2 Log into your account, or create a new account.
- 3 Using the Vehicle Identification Number (VIN), add your new Indian Motorcycle® to your Garage.
- 4 Locate and download the latest software to a USB flash drive (8 GB) (File cannot be in a folder).
- 5 Properly eject USB flash drive from your personal computer.

ON YOUR MOTORCYCLE

- 6 Connect the USB flash drive to the USB cable located within the storage area above display.
- 7 Power up your Indian Motorcycle®.

ON YOUR RIDE COMMAND™ SCREEN

- 8 Navigate to the Settings Menu (shown in document above).
- 9 Select General Settings, then select Update Software.
- 10 Select the file you wish to load (use date listed in the file name to determine most recent file).
- 11 Select Yes to restart display (restart required).